

# NAUTIZ X41

## QUICK START GUIDE



**handheld**

# ① WHAT'S IN THE BOX


The pictures shown below may differ from the actual products. To purchase additional or optional products, contact our customer center.



Nautiz X41 Main body



Standard battery

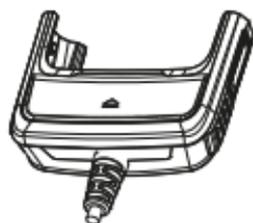

Charging dock




USB cable




Adaptor

## ② YOUR NAUTIZ X41

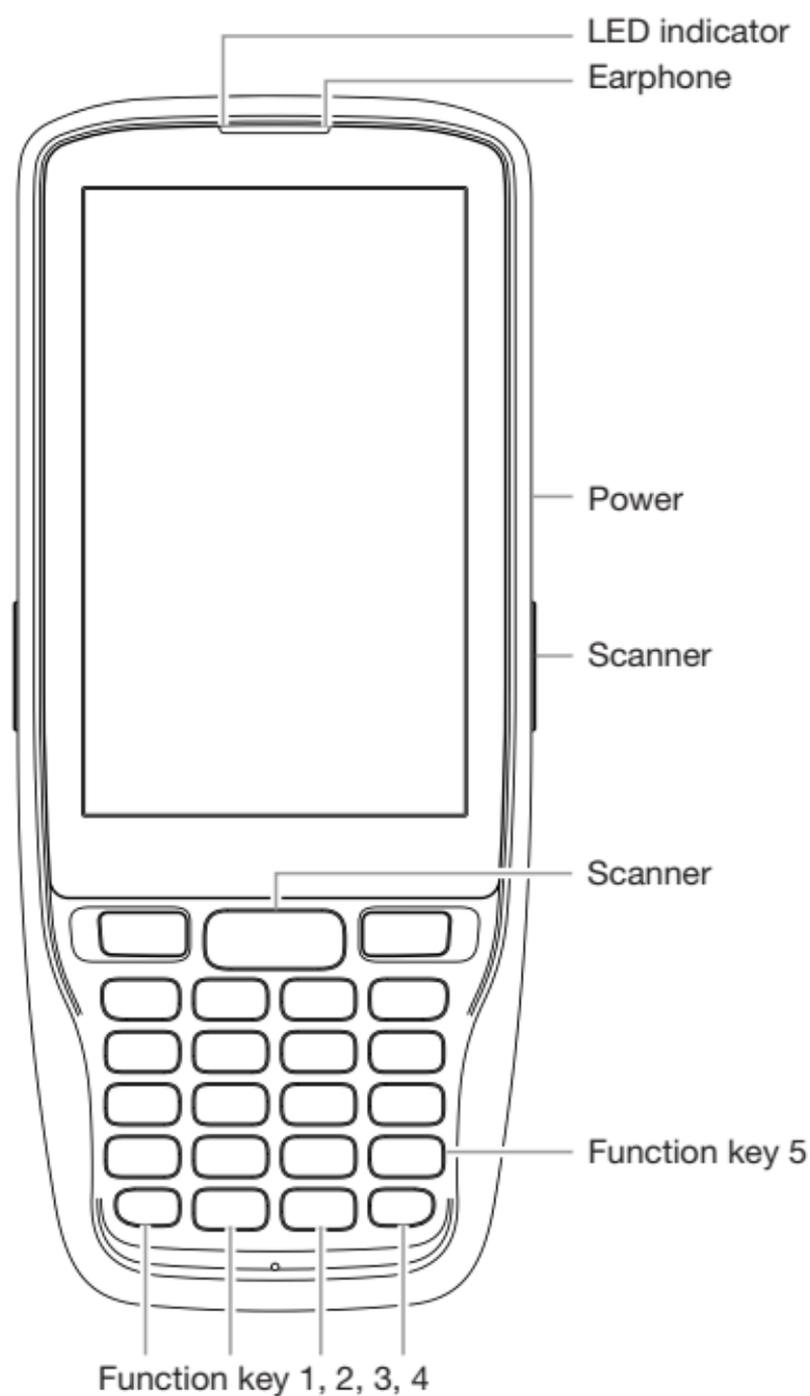


### ③ YOUR NAUTIZ X41

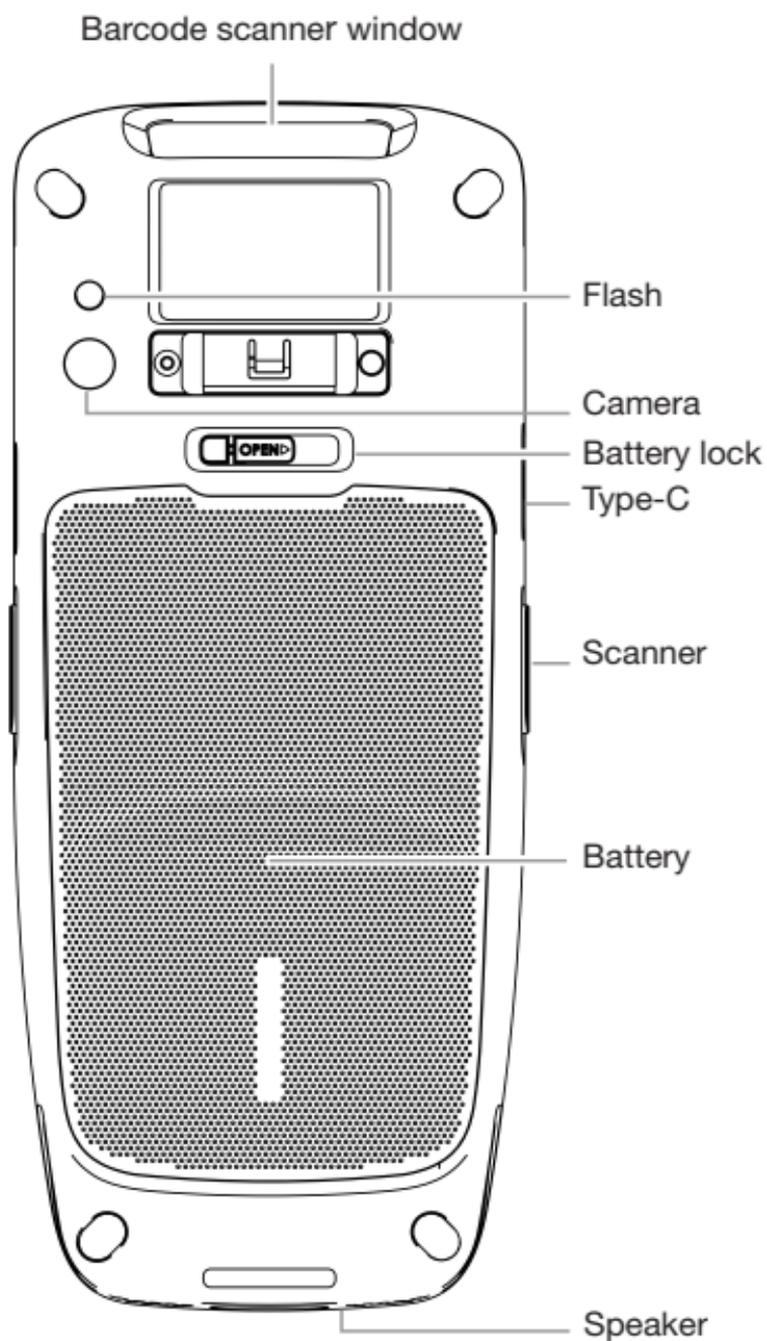


## ④ INSERT/REMOVE BATTERY

### To insert the battery

1. Insert the battery and cover.

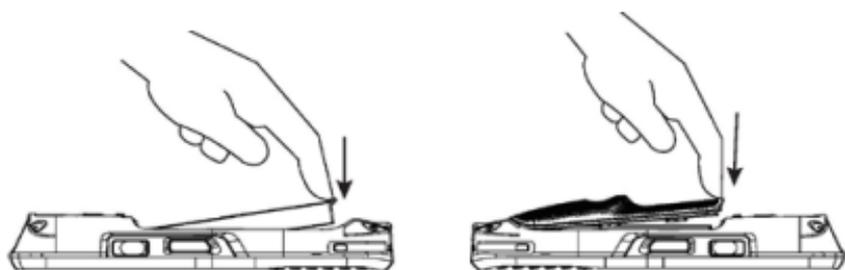


2. Slide the battery lock to the left.

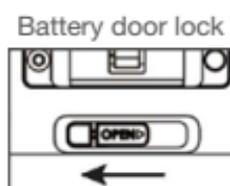


### To remove the battery

1. Slide the battery lock to the right.

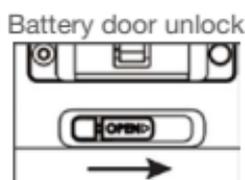

2. Remove the cover and battery.

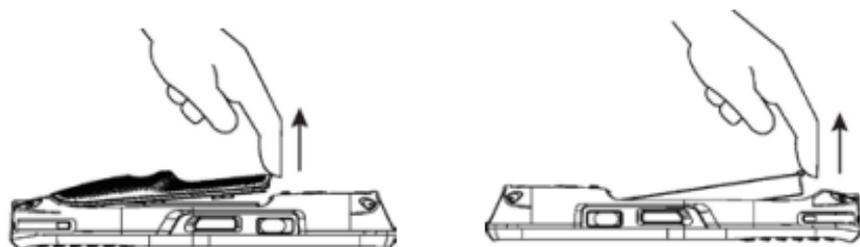

## ⑤ USING SCANNER


---

**Scanner function is by default turned OFF.**

---


How to enable barcode scanning feature:  
Settings > Scan Setting > Enable

Press the [Front Scan] or [Side Scan] button to start scanning.

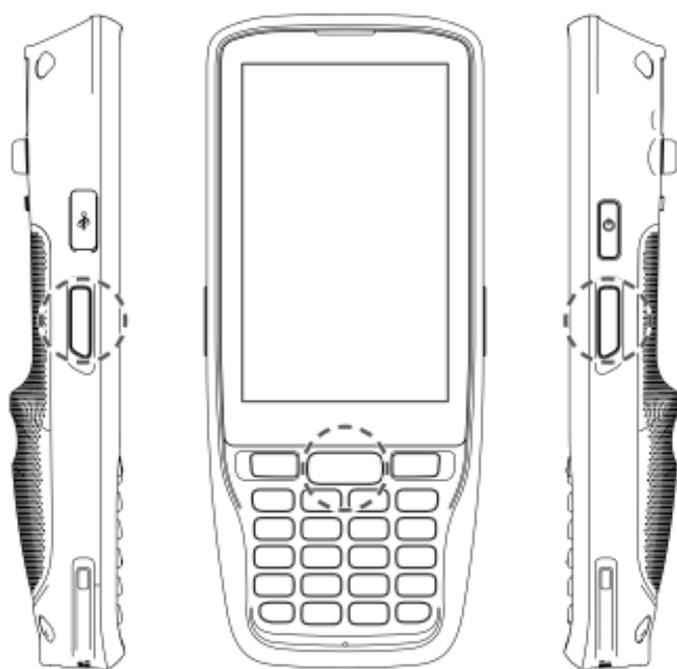


### Scanning Barcode

To scan a barcode, keep a distance of about 10 cm between the barcode and the barcode scanner window and scan the barcode at the correct angle.

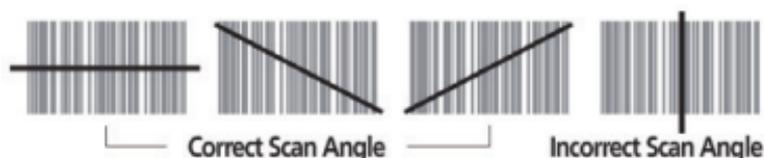

## ⑥ INSERTING/EXTRACTING SIM/MICRO SD CARD

This is how you insert and remove the SIM/micro SD.

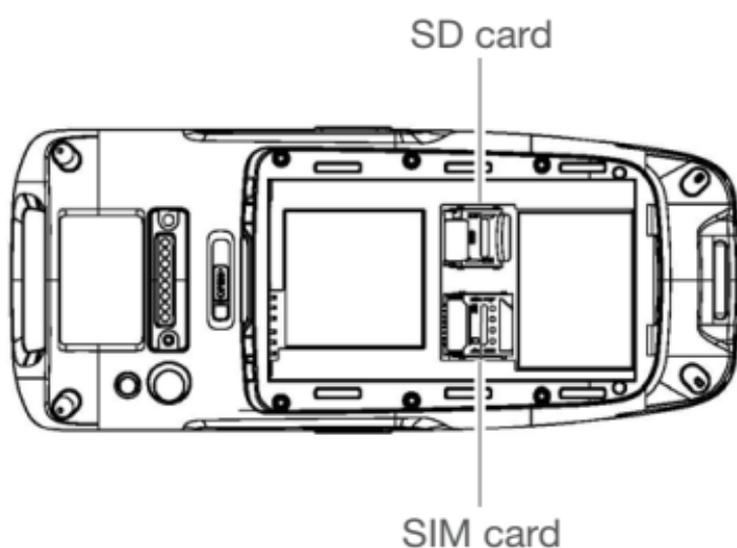

Please go to [www.handheldgroup.com/knowledgebase](http://www.handheldgroup.com/knowledgebase) to download more information.

Google, Google Play and other marks are trademarks of Google LLC.  
Handheld Rugged Mobile Computer.

**Version 1.3**

**handheld**  
[www.handheldgroup.com](http://www.handheldgroup.com)